English translation prepared by DIBt



A.2.4.3 Cross laminated timber

The minimum requirements for spacing, end and edge distances of screws in the plane or edge surfaces of cross laminated timber are summarised in Table A.2.4. The definition of spacing, end and edge distance is shown in Figure 2.1 and Figure 2.2. The minimum spacing, end and edge distances in the edge surfaces are independent of the angle between screw axis and grain direction. They may be used based on the following conditions:

- Minimum thickness of cross laminated timber: 10 · d
- Minimum penetration depth in the edge surface: 10 · d

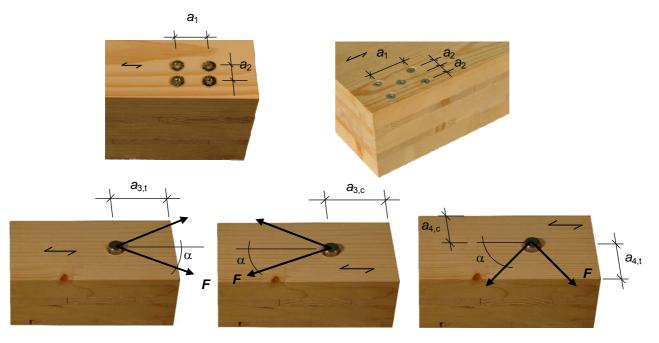


Figure 2.1 Definition of spacing, end and edge distances in the plane surface

Table A.2.4 Minimum spacing, end and edge distances of screws in the plane or edge surfaces of cross laminated timber

	a ₁	a _{3,t}	a _{3,c}	a_2	a _{4,t}	a _{4,c}
Plane surface (see Figure 2.1)	4 · d	6 · d	6 · d	2,5 · d	6 · d	2,5 · d
Edge surface (see Figure 2.2)	10 ⋅ d	12 · d	7 · d	4 · d	6 · d	3 · d

HECO-FIX-plus, HECO-TOPIX, HECO-TOPIX-T and HECO-TOPIX-CC screws	
Minimum spacings and distances	Annex 2

Z56785.14 8.06.03-148/14